

Q520.001

2006-2007 Polaris

Sawtooth 200

Stage 1

For mildly tuned machines using the stock airbox with stock or aftermarket filter. May also be used with a good aftermarket exhaust system.

<i>Parts List</i>		
1	Main Jet	DJ090
1	Main Jet	DJ094
1	Main Jet	DJ098
1	Main Jet	DJ102
1	Main Jet	DJ106
1	Fuel Needle	DNO305
1	Adjusting Washers	DW0001
1	E-Clip	DE0001
1	Air Screw Tool	DT008

STAGE ONE INSTRUCTIONS

1. Unscrew the carb top. Disconnect the throttle cable and remove the slide. Remove needle retainer.(Fig.A).
2. Install Dynojet needle on groove #5 for applications below 5000 feet, groove #4 for above 5000 feet, using all stock spacers. Install the Dynojet washer above the E-clip.
3. Locate the stock main jet, inside the float bowl. Remove stock main jet and replace with Dynojet main provided. Use the DJ098 below 3000 feet, DJ094 from 3000 to 6000 feet and DJ090 above 6000 feet. When running an aftermarket exhaust, use the DJ102 below 3000 feet, DJ098 from 3000-6000 feet and the DJ094 above 6000 feet. If you remove the airbox lid use a main jet that is 4 points larger. Be sure that the jet you are changing is the main jet.
4. Locate the air screw (Fig. B). Using the tool provided DT008, turn the air screw clockwise until it seats, then turn out 1 turn.

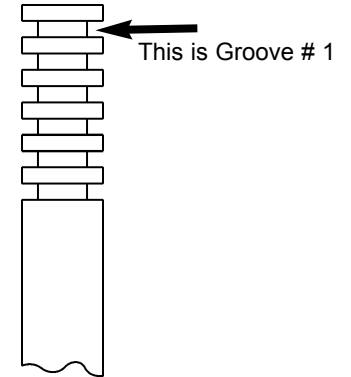


Fig.A

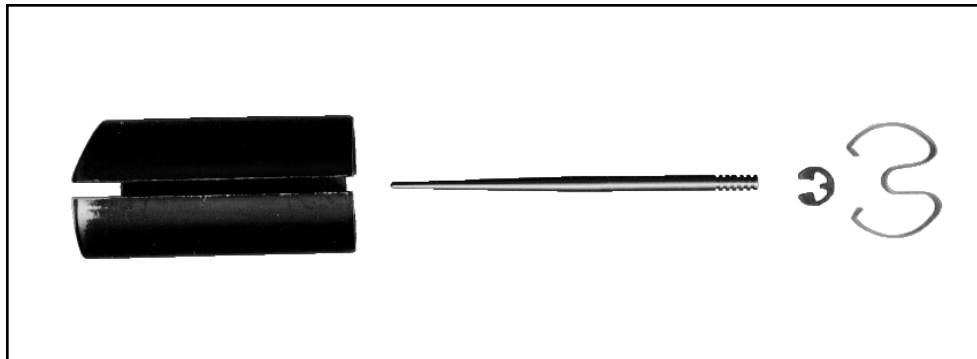


Fig.B



Air Screw

Float Bowl